

POWERED TEAM DRINKER



ASSEMBLY OF YOUR SPORTS COOL-DRINKER

- STEP 1)** Unpack the Cart (*item A*) and attach the Power Pack (*item B*) to the backside of the cart using bolts, washers and locknuts (*items N,O,P*) as shown in Diagram.
- STEP 2)** Now attach the Power Drinker Manifold (*item C*) to the Cart using the Tension Bands (*item G*) and bolts, washers and locknuts (*items N,O,P*) as shown in Diagram.
- STEP 3)** Connect the Water Tube coming from the top of the Power Pack to the Water Tube coming from the bottom of the Manifold as shown in Diagram.
- STEP 4)** Connect the Water Tube coming from the bottom of the Power Pack to the T-Fitting (*item H*) at the bottom of the Tank (*item D*) as shown in Diagram.
- STEP 5)** Secure Water Tank to Cart using the Tie Down Strap (*item J*), locate as shown in Diagram.
- STEP 6)** Pump Switch (*item Q*) must be in the off position. Open front cover to Power Pack and connect together the two black wires (1 male and 1 female) that are tapped together. Unit is now ready for charging.

BATTERY CHARGING INSTRUCTIONS

- 1) Pump Switch (*item Q*) must be in the off position while charging.
- 2) Open Power Pack Door. **DOOR MUST REMAIN OPEN DURING CHARGING.** Connect charger (*item F*) to charging harness (*item W*) then plug charger into standard outlet. Charge battery 24 hours before first use.
- 3) Do not allow battery to fully discharge. Discharging battery completely will shorten battery life.
- 4) Charge battery overnight (12 hrs +) after each use.
- 5) When storing the unit in the off - season, make sure to maintain battery charge and store in a cool setting. This will help to preserve battery life. See specific instructions that come with charger.

BATTERY HAS A 30 DAY WARRANTY ONLY. LIFE OF BATTERY IS DETERMINED BY CARE AND AMOUNT OF USE.


OPERATING INSTRUCTIONS


- 1) Fill tank with drinkable clean **WATER OR ICE ONLY. NO SPORTS DRINKS OR POWDERED DRINK MIXES OF ANY KIND.**
- 2) Turn Pump Switch (*item Q*) to the on position you will here the pump pressurize the water lines and then it will turn off until more pressure is needed.
- 3) You are now ready to drink from the water wands (*item L*). Add water or ice to tank as needed.
- 4) Turn off Pump Switch if tank runs out of water this could damage pump. Turn off Pump Switch when moving the Team Drinker.
- 5) **CAUTION - DANGEROUS DISEASES CAN BE TRANSMITTED BY DRINKING CONTAMINATED WATER.** CLEAN AND PROPERLY SANITIZE AND FLUSH SYSTEM AFTER EACH USE. FOLLOW INSTRUCTION ON SANITIZING TABLETS PROVIDED.

TROUBLE SHOOTING

- | | |
|---|---|
| Pump doesn't run when switch is turned on - | <ul style="list-style-type: none">• Check battery connections.• Is battery charged? |
| Pump runs but system doesn't pressurize - | <ul style="list-style-type: none">• Check for bad lower hose or loose connections on lower hose.• Check for loose strainer bowl or clogged strainer. |
| Fully charged battery doesn't last long - | <ul style="list-style-type: none">• Replace battery. |
| Battery will not charge - | <ul style="list-style-type: none">• Check in-line fuse• Have charger checked |

POWERED TEAM DRINKER

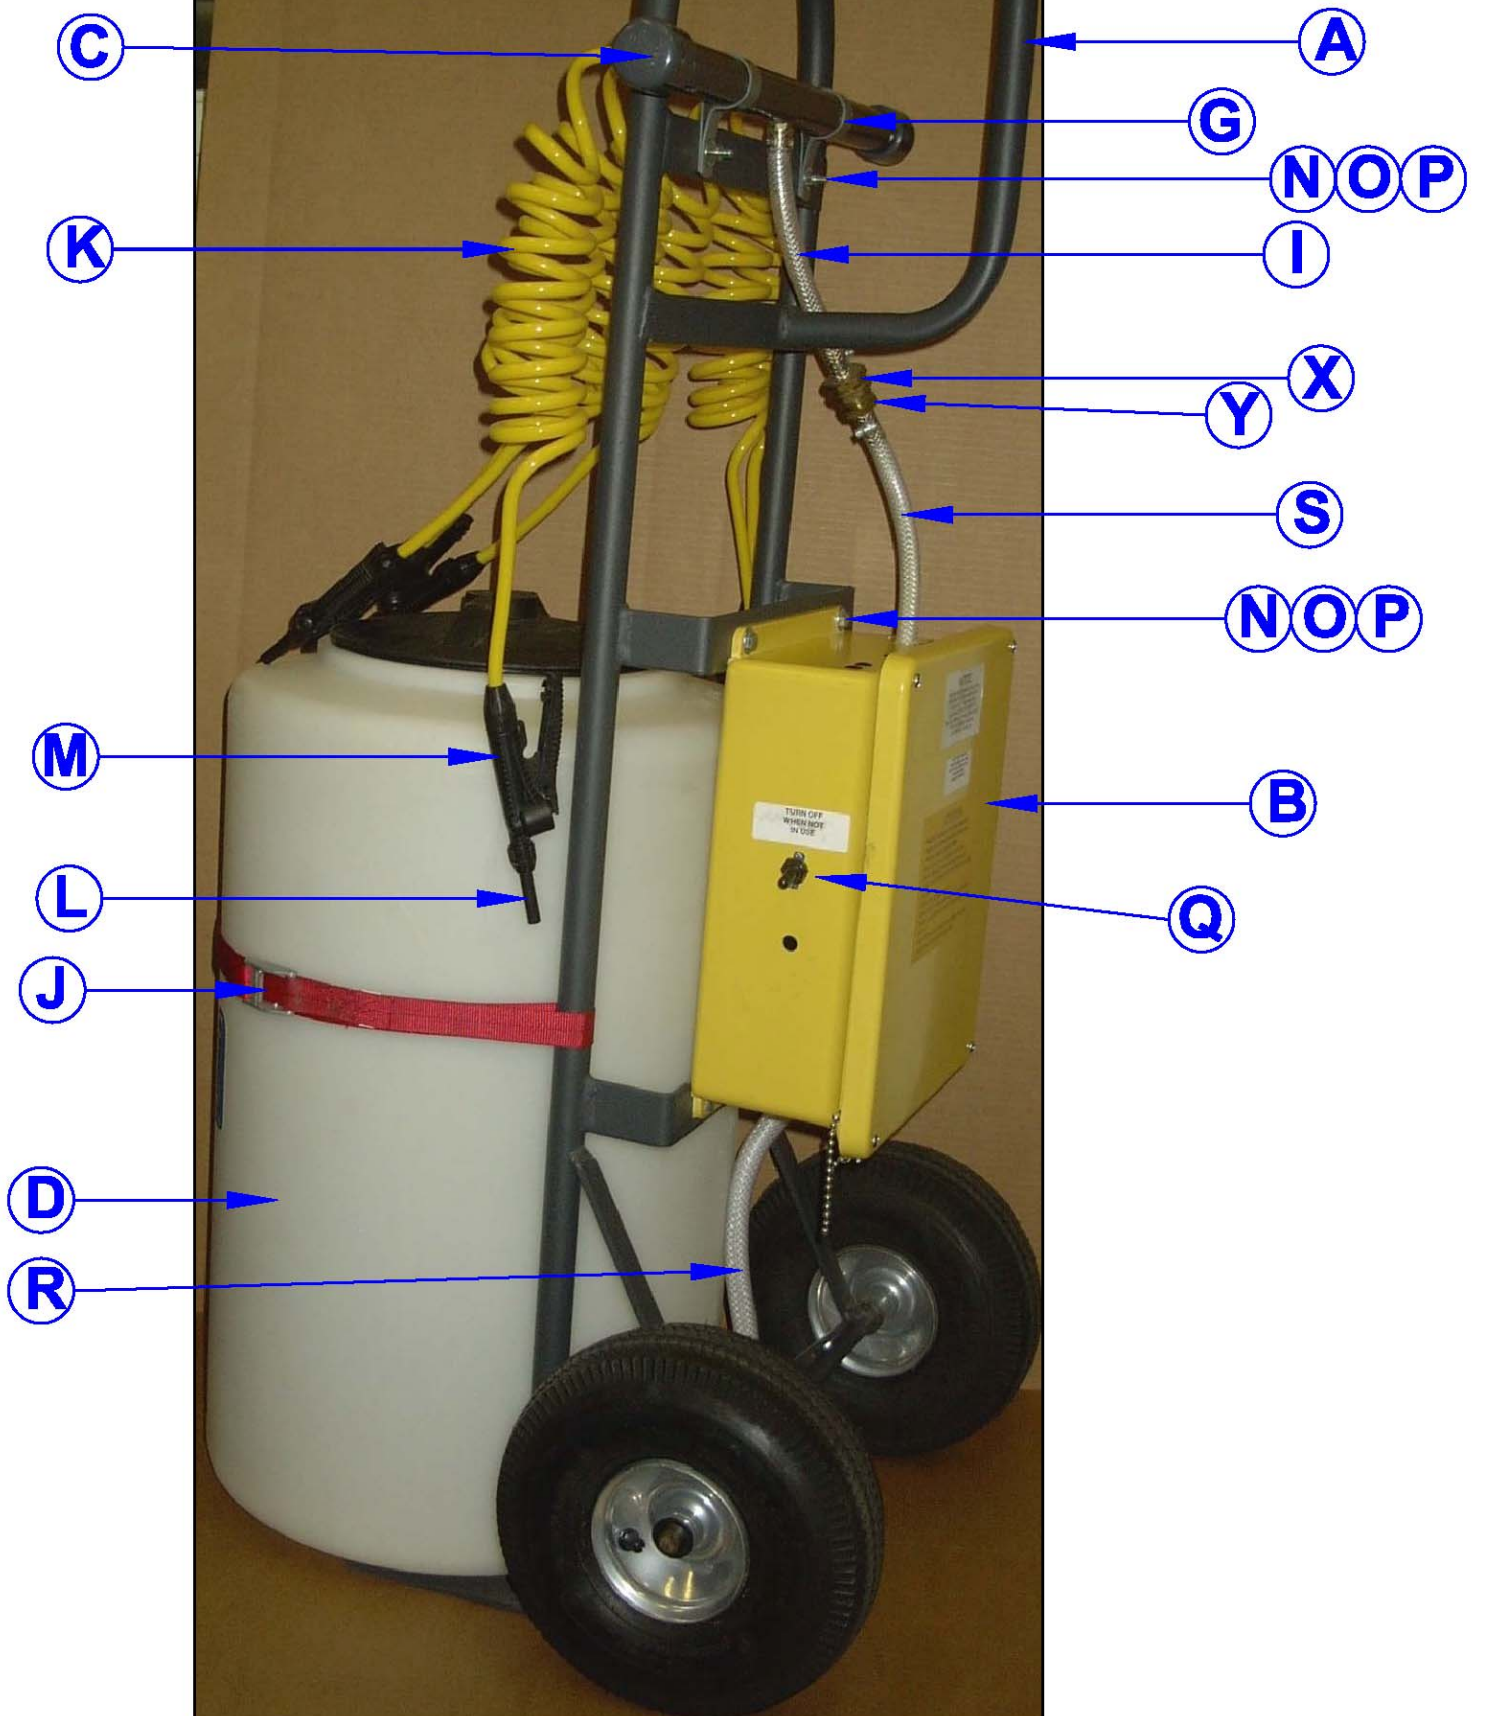

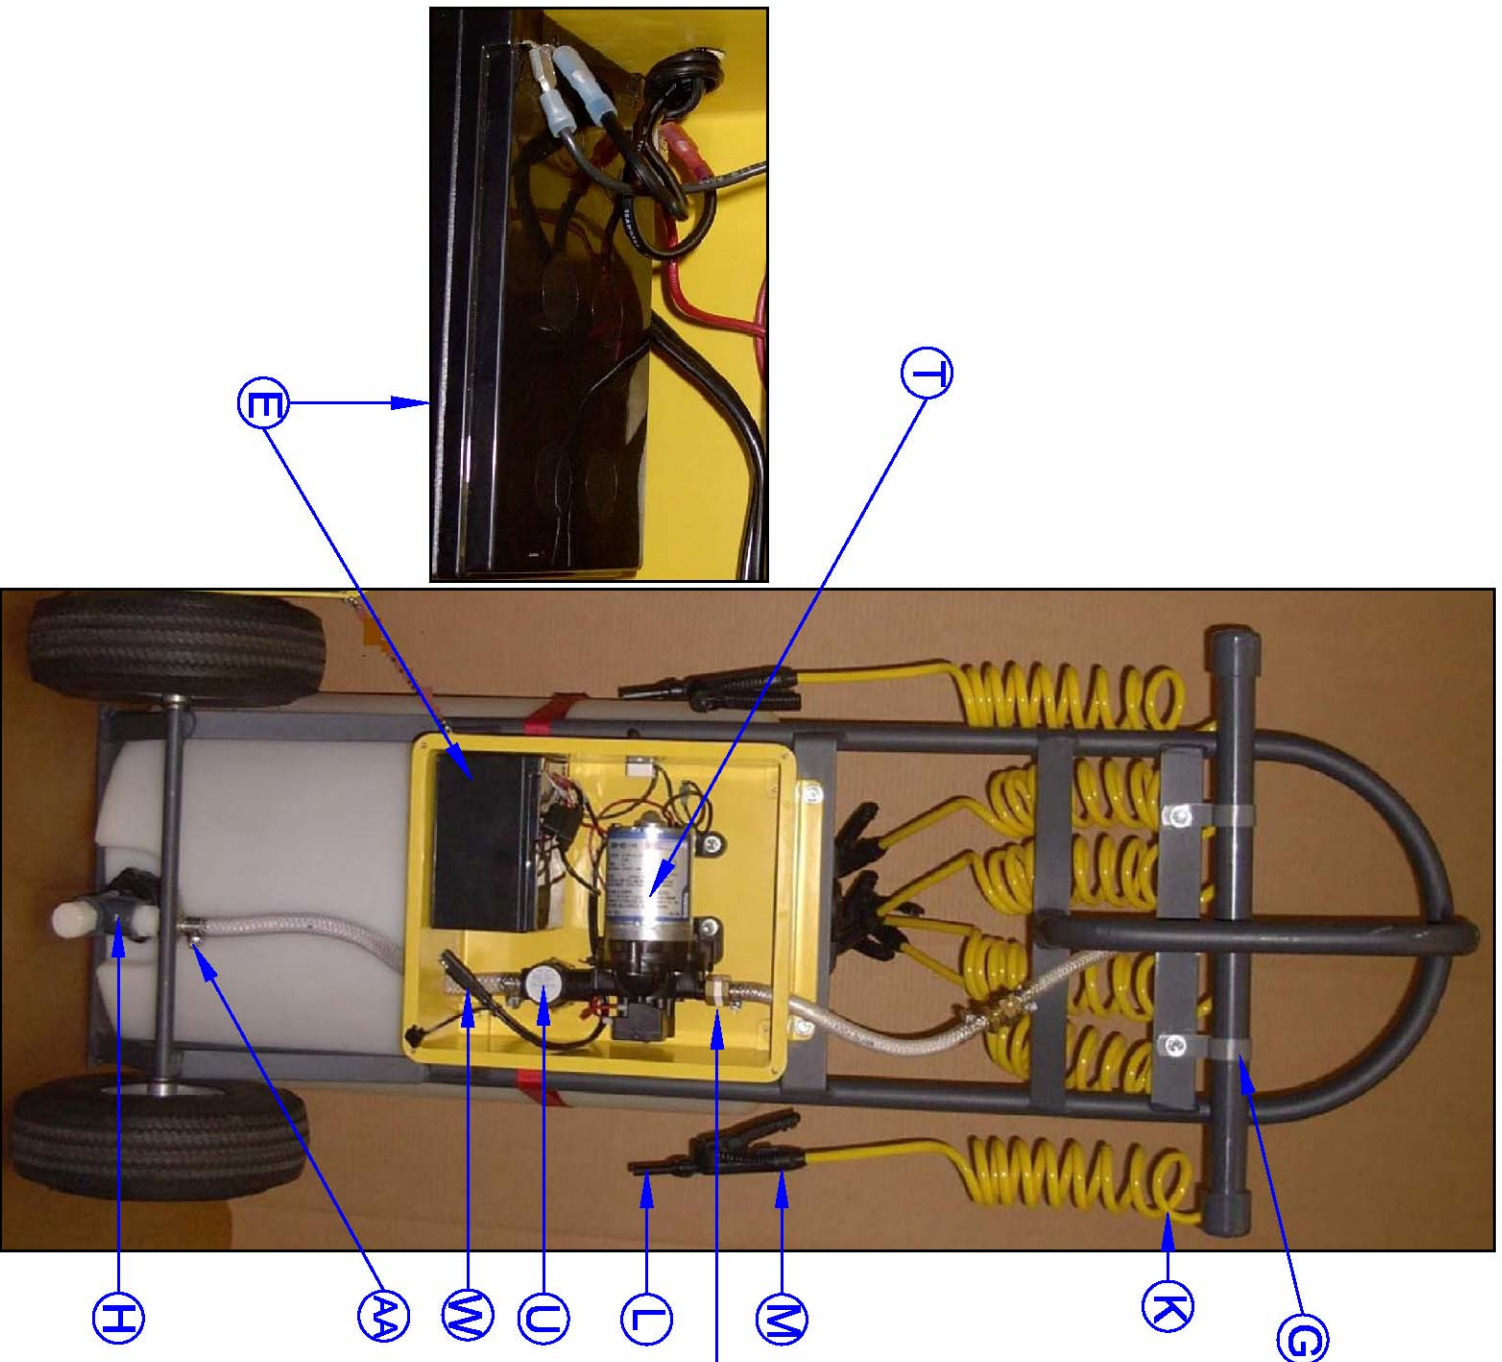

CHARGER (F)



CHARGING BATTERY

- OPEN POWER PACK DOOR
- CONNECT CHARGING HARNESS (ITEM W) TO CHARGER (ITEM F)
- PLUG CHARGER INTO STANDARD OUTLET

POWERED TEAM DRINKER



PARTS LIST:

ITEM	DESCRIPTION	QTY	PART#
A	2 WHEEL HYDRATION CART	1 EA	ZDRINK2WHL
B	POWER PACK	1 EA	ZSPCPDPA
C	MANIFOLD	1 EA	ZSPCDMA
D	20 GAL WATER TANK	1 EA	ZSPC20GTA
E	BATTERY 12V - 12AMP	1 EA	SPCBAT
F	BATTERY CHARGER 12V	1 EA	ZX3930034
G	TENSION BAND	2 EA	ZX0900098
H	T-FITTING	1 EA	ZX3920115
I	MANIFOLD HOSE	1 EA	
J	TIE DOWN STRAP	1 EA	ZX3900040
K	6' COIL HOSE	6 EA	ZX3920040
L	WATER WAND #6	6 EA	ZX3920080
M	POLY TRIGGER VALVE	6 EA	ZX3920038
N	HEX BOLT 1/4 X 1"	6 EA	ZX3700001
O	FLAT WASHER 1/4"	12 EA	ZX3400001
P	LOCK NUT 1/4"	6 EA	ZX3600004
Q	TOGGLE SWITCH	1 EA	ZX3930017
R	LOWER HOSE 1/2"	1 EA	
S	UPPER HOSE 3/8"	1 EA	
T	PUMP	1 EA	ZX3920031
U	STRAINER	1 EA	ZX3920033
V	SANITIZING TABLES	1 GAL	SPC1G
W	CHARGING HARNESS	1 EA	
X	3/4 FEMALE HOSE CONNECTOR	1 EA	ZX3920104
Y	3/4 MALE HOSE CONNECTOR	1 EA	ZX3920106
Z	1/2 FEMALE PIPE CONNECTOR	1 EA	ZX3920090
AA	3/4 FEMALE HOSE CONNECTOR	1 EA	ZX3920106

NOTICE

OPEN THE POWER PACK DOOR AND CONNECT THE TWO WIRES THAT ARE WRAPPED WITH A RUBBER BAND. THESE WIRES ARE DISCONNECTED AT THE FACTORY TO PREVENT DRAINAGE OF THE BATTERY AND TO PREVENT THE UNIT FROM BEING ACCIDENTALLY TURNED ON.

- TURN OFF WHEN NOT IN USE
- DO NOT RUN PUMP DRY
- TURN OFF TO CHARGE BATTERY

WARNING

FOR THE SAFETY OF THE USER AND THE CONTINUED SAFE PERFORMANCE FROM THIS EQUIPMENT, INSPECTION AND MAINTENANCE MUST BE PERFORMED REGULARLY. DO NOT USE THIS EQUIPMENT IF DAMAGE HAS OCCURRED.

ATTENTION:

SERIOUS DISEASES CAN BE TRANSMITTED FROM CONTAMINATED WATER, THIS IS NOT A WATER PURIFICATION SYSTEM. SANITIZE AND FLUSH BEFORE EVERY USE. USE WATER ONLY FROM A SANITARY SOURCE. DO NOT USE "SPORTS DRINKS" OR POWDERS IN THIS SYSTEM. DRAIN UNIT AFTER EACH USE. IF THE UNIT IS TO BE STORED, SANITIZE, FLUSH AND DRAIN ALL WATER FROM THE UNIT AND REMOVE THE TOP CAP. CHECK WITH LOCAL HEALTH DEPARTMENT FOR ANY ADDITIONAL PREVENTATIVE MEASURES.

CAUTION

POWER PACK DOOR MUST REMAIN OPEN FOR PROPER VENTILATION WHILE CHARGING BATTERY.